YASHICA

FX-D
QUARTZ

ASSEMBLING CHART

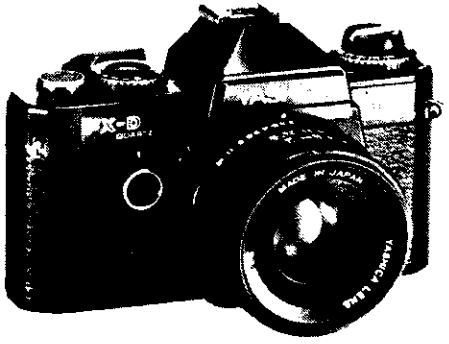

YASHICA CO., LTD.
TOKYO JAPAN

152

No. 1

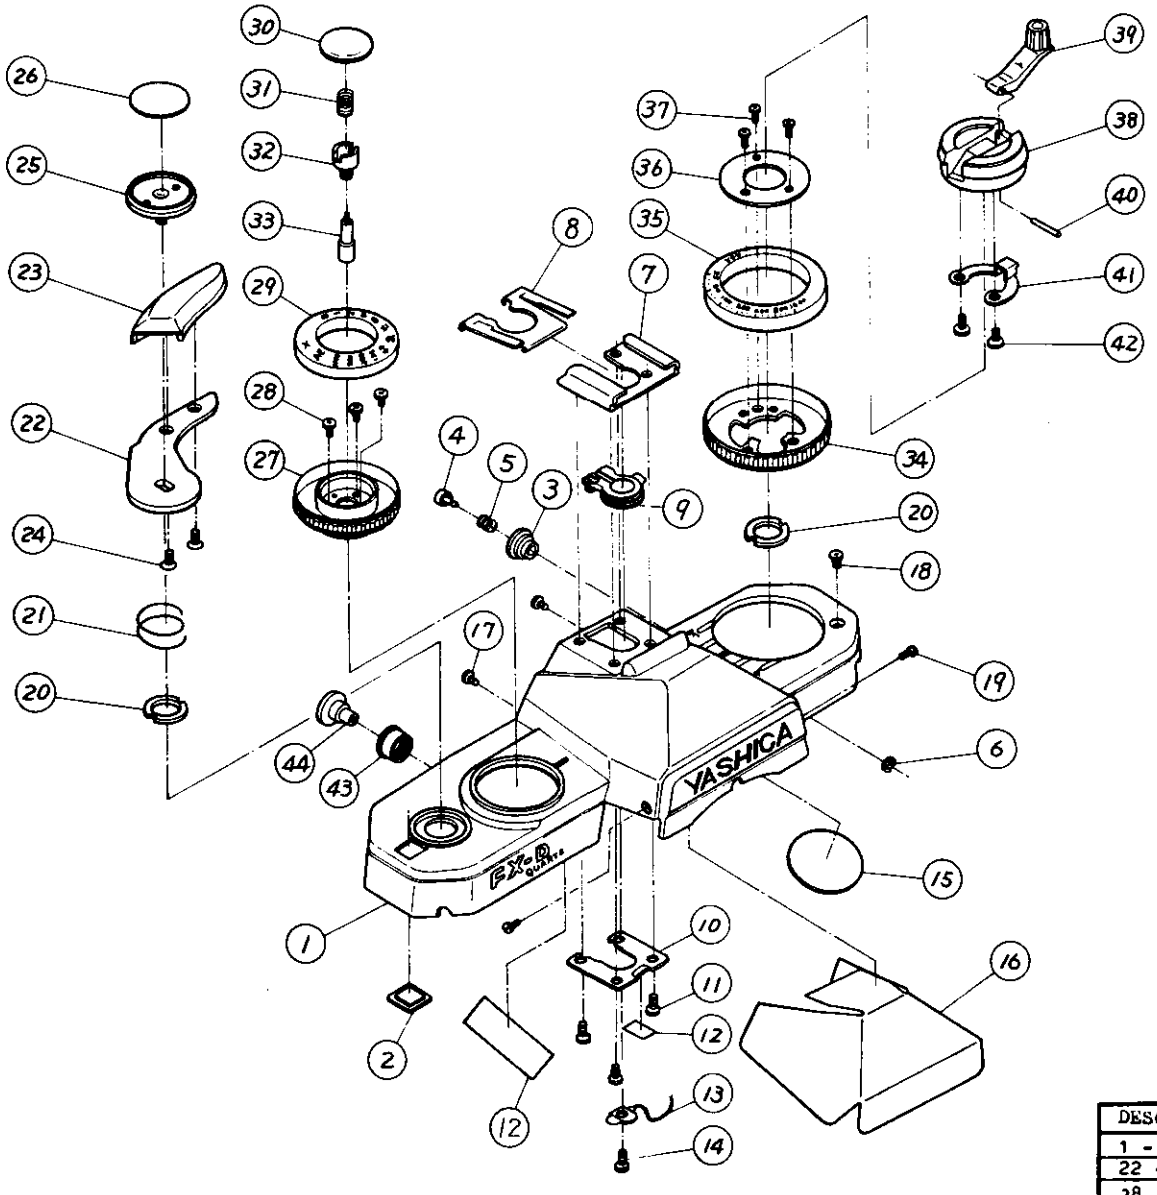

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Top Cover	1
2	152121	Counter Window	1
3	139191	S. Lock Button Holder	1
4	139161	S. Lock Button	1
5	139192	S. Lock Button Spring	1
6	66101225	E - Ring (E-12)	1
7	139169	Accessory Shoe	1
8	139178	Shoe Plate Spring	1
9	069461	Shoe Contact Ass'y	1
10	152125	Shoe Reinforcement Plate	1
11	61912822	Shoe Reinforcement Plate S.S.	3
12	-	Acetate Cloth Tape	2
13	152128	Shoe Contact Plate (2) Ass'y-	1
14	61914024	Shoe Contact Plate(2)Ass'y SS	1
15	152513	P.C.V.	1
16	152126	Insulation Sheet	1
17	61912529	Top Cover S.S.	2
18	61912029	" "	1
19	61903029	" "	2
20	322312	Top Cover Nut	2
21	152636	Winding Lever Spring	1
22	152630	Winding Lever	1
23	152632	Winding Lever Knob	1
24	61824022	Winding Lever Knob S.S.	2
25	152633	Winding Lever S.S.	1
26	152634	Winding Lever Leather	1
27	152402	S. Dial	1
28	61913024	S. Dial S.S.	3
29	152403	S. Dial Name Plate	1
30	139311	Release Button	1
31	139313	Release Spring	1
32	152409	Shutter Button Shaft Stopper	1
33	152408	Shutter Button Shaft	1
34	152421	ASA Dial	1
35	152422	A. Dial Name Plate	1
36	152423	A. Dial Cover	1
37	61912229	A. Dial Cover S.S.	3
38	139368	Rewind Knob	1
39	139369	Crank Arm Ass'y	1
40	66670830	Crank Arm Pin	1
41	139373	Crank Arm Spring	1
42	69112554	Crank Arm Spring S.S.	2

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 16	069160	Top Cover Ass'y
22 - 24	069661	Winding Lever Ass'y
38 - 42	065920	Rewind Knob Ass'y

NOTE: (Parts with marked "★" are not available.)

No. 2

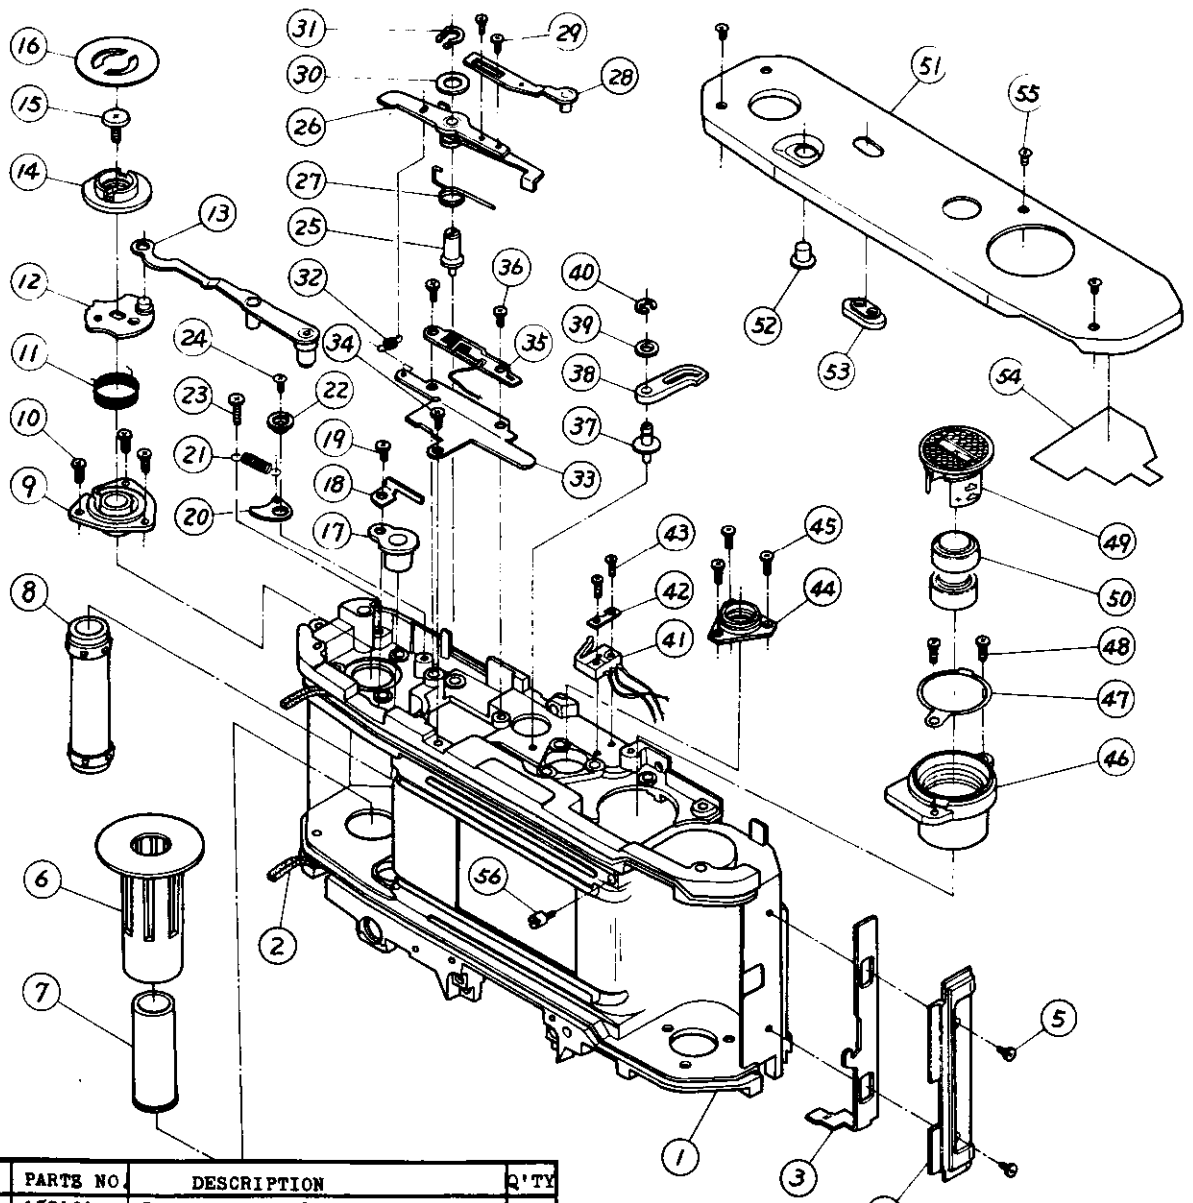

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Body	1
2	147153	Body Light-Proof Moquette	2
3	152102	Back Cover Lock Plate	1
4	152103	Lock Plate Cover	1
5	61913024	Lock Plate Cover S.S.	2
6	139641	Outside Spool	1
7	305658	Inside Spool	1
8	139648	Sprocket	1
9	147631	Winding Holder	1
10	63913024	Winding Holder S.S.	3
11	152622	Winding Spring	1
12	066617	Set Cam Plate Ass'y	1
13	066717	SM. Set Lever Ass'y	1
14	152621	MD. Cap Ring	1
15	66001037	MD. Cap Ring S.S.	1
16	139680	MD. Light-Proof Plate	1
17	139646	Sprocket Metal	1
18	147630	Sprocket Reverse Spring	1
19	63912524	Sprocket Reverse Spring S.S.	1
20	147638	Anti-Rewind Claw	1
21	147636	Anti-Rewind Claw Spring	1
22	147637	Anti-Rewind Collar	1
23	61915524	Anti-Rewind Claw Spring S.S.	1
24	61814024	Anti-Rewind Collar S.S.	1
25	139690	W. Obstruction Lever Shaft	1
26	065716	W. Obstruction Lever Ass'y	1
27	139691	W. Obstruction Spring (B)	1
28	065436	TF. SW. Lever (A) Ass'y	1
29	63901524	TF. SW. Lever (A) Ass'y S.S.	2
30	60332621	Washer	1
31	66172525	Snap Ring (GS- 2,5)	1
32	139688	W. Obstruction Spring (A)	1
33	139692	SM. Set Lever Fixer	1
34	61913024	SM. Set Lever Fixer S.S.	1
35	139697	Connector Base	1
36	61913024	Connector Base S.S.	2
37	139695	TF. SW. Shaft	1
38	139670	TF. SW. Lever (B)	1
39	60122610	Washer	1
40	66101525	E - Ring (E - 15)	1
41	139664	TF. SW.	1
42	139652	TF. SW. Fixer	1
43	63904024	TF. SW. Fixer S.S.	2
44	139144	Tripod Socket	1
45	61924022	Tripod Socket S.S.	3
46	069110	Battery Case Ass'y	1
47	139154	Battery Case Contact (B)	1
48	61914522	Battery Case S.S.	2
49	065930	Battery Cap Ass'y	1
50	★	Battery	2
51	152130	Bottom Cover	1
52	139651	Sprocket Button	1
53	139194	Connector Frame	1

	PARTS NO.	DESCRIPTION	Q'TY
54	152131	Bottom Cover Insulation Sheet	1
55	61812529	Bottom Cover S.S.	3
56	147105	Film Guide Pin	1

NOTE : (Parts with marked "★" are not Available)

152

No. 3

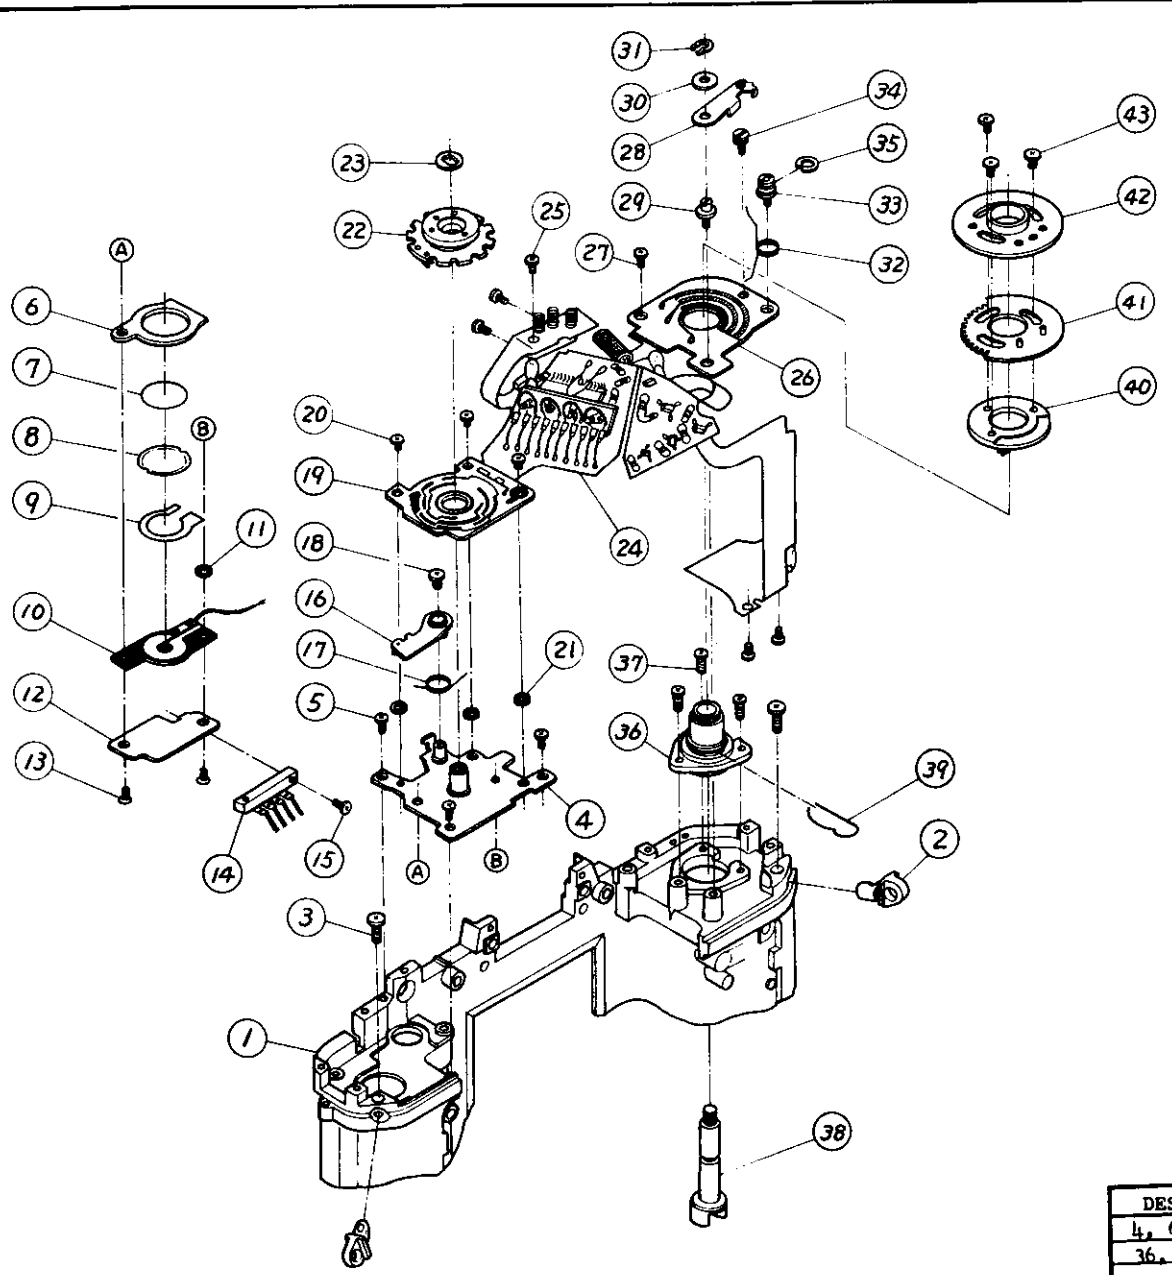

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Body	1
2	152104	Strap Holder	2
3	69226054	Strap Holder S.S.	2
4	152401-A	S. Base Plate Sub Ass'y	1
5	61912522	S. Base Plate Ass'y S.S.	3
6	152417	R. Base Holder	1
7	131814	Check Insulation Sheet	1
8	152520	PS. SW.	1
9	152416	Release Base Washer	1
10	152506	Release Base	1
11	60301812	Washer	1
12	152418	Release Base Fixer	1
13	61813022	Release Base Fixer S.S.	2
14	139339	Conbination Connecter	1
15	63903024	Conbination Connecter S.S.	1
16	069301	S. Click Lever Ass'y	1
17	152414	S. Click Spring	1
18	66001033	S. Click Lever Ass'y S.S.	1
19	152504	S. Base	1
20	61912522	S. Base S.S.	3
21	60151812	Washer	3
22	069442	S. Dial Shaft Ass'y	1
23	152407	S. Dial Shaft Stopper	1
24	069503	Amp.	1
25	61912522	Amp. S.S.	5
26	152505	ASA Base	1
27	61912522	ASA Base S.S.	1
28	069428	A. Lock Lever Ass'y	1
29	152430	A. Lock Lever Shaft	1
30	60322110	Washer	1
31	66172025	E - Ring (GS - 2)	1
32	152431	A. Lock Spring	1
33	152432	A. Lock Spring Shaft	1
34	152433	A. Lock Spring Post	1
35	66150325	E - Ring (CE - 3)	1
36	152640	Rewind Shaft Holder	1
37	63924524	Rewind Shaft Holder S.S.	3
38	139342	Rewind Shaft	1
39	139343	Rewind Shaft Spring	1
40	152436-7	A. Contact Holder Ass'y	1
41	152426-7	A. Click Plate Ass'y	1
42	152424	A. Dial Shaft	1
43	63912824	A. Dial Shaft S.S.	3

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
4, 6 - 13	069445	S. Base Plate Ass'y
36, 38, 39	069610	Rewind Shaft Ass'y

NOTE: (Parts makred "★" are not Available)

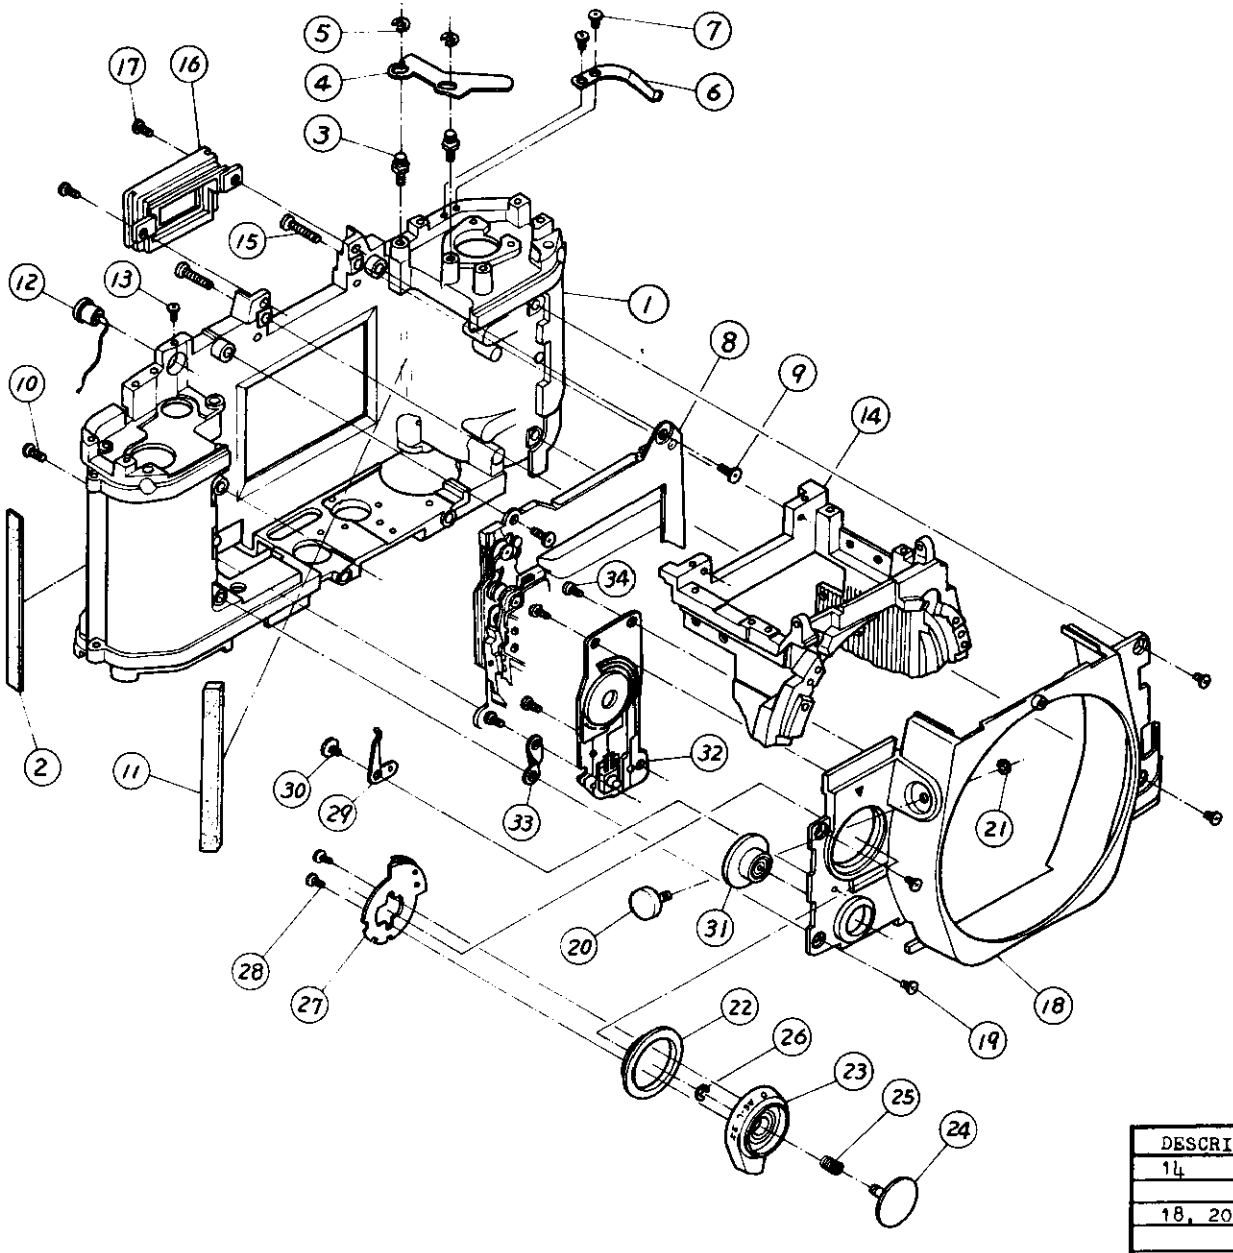

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Body	1
2	152116	Body Hinge Moquette	1
3	152435	A. Reverse Lever Shaft	2
4	152434	A. Reverse Lever	1
5	66101525	E. Ring (E - 15)	2
6	147142	Lock Plate Spring	1
7	61912224	Lock Plate Spring S.S.	2
8	139201	Complete Shutter	1
9	61824522	Shutter S.S.	2
10	61924022	" "	1
11	147206	Shutter Light-Proof Moquette	1
12	065462	R. Socket Ass'y	1
13	61812521	R. Socket Ass'y S.S.	1
14	★	Mirror Box	1
15	61927024	Mirror Box S.S.	2
16	139168	Eye-Piece Frame	1
17	61913524	Eye-Piece Frame S.S.	2
18	152801-A	Mount Cover Sub Ass'y	1
19	63912224	Mount Cover S.S.	4
20	147803	Set Off Button	1
21	66101225	E - Ring (E - 12)	1
22	★	EL. Lever Holder	1
23	152205-A	EL. Lever Ass'y	1
24	139209	EC. Button	1
25	139210	EC. Button Spring	1
26	66101225	E - Ring (E - 12)	1
27	152208-9	EL. Rotation Plate Ass'y	1
28	61913024	EL Rotation Plate Ass'y S.S.	2
29	152210	EL. Click Spring	1
30	66001041	EL. Click Spring S.S.	1
31	152212	Self Window	1
32	152507-A	EC. Base Ass'y	1
33	152213	Earth Plate	1
34	69112554	EC. Base Ass'y S.S.	4

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
14	069750	Mirror Box Ass'y
		See Page No. 6, 7, 8
18, 20-34	069801	Mount Cover Ass'y

NOTE: (Parts with marked "★" are not available.)

No. 5

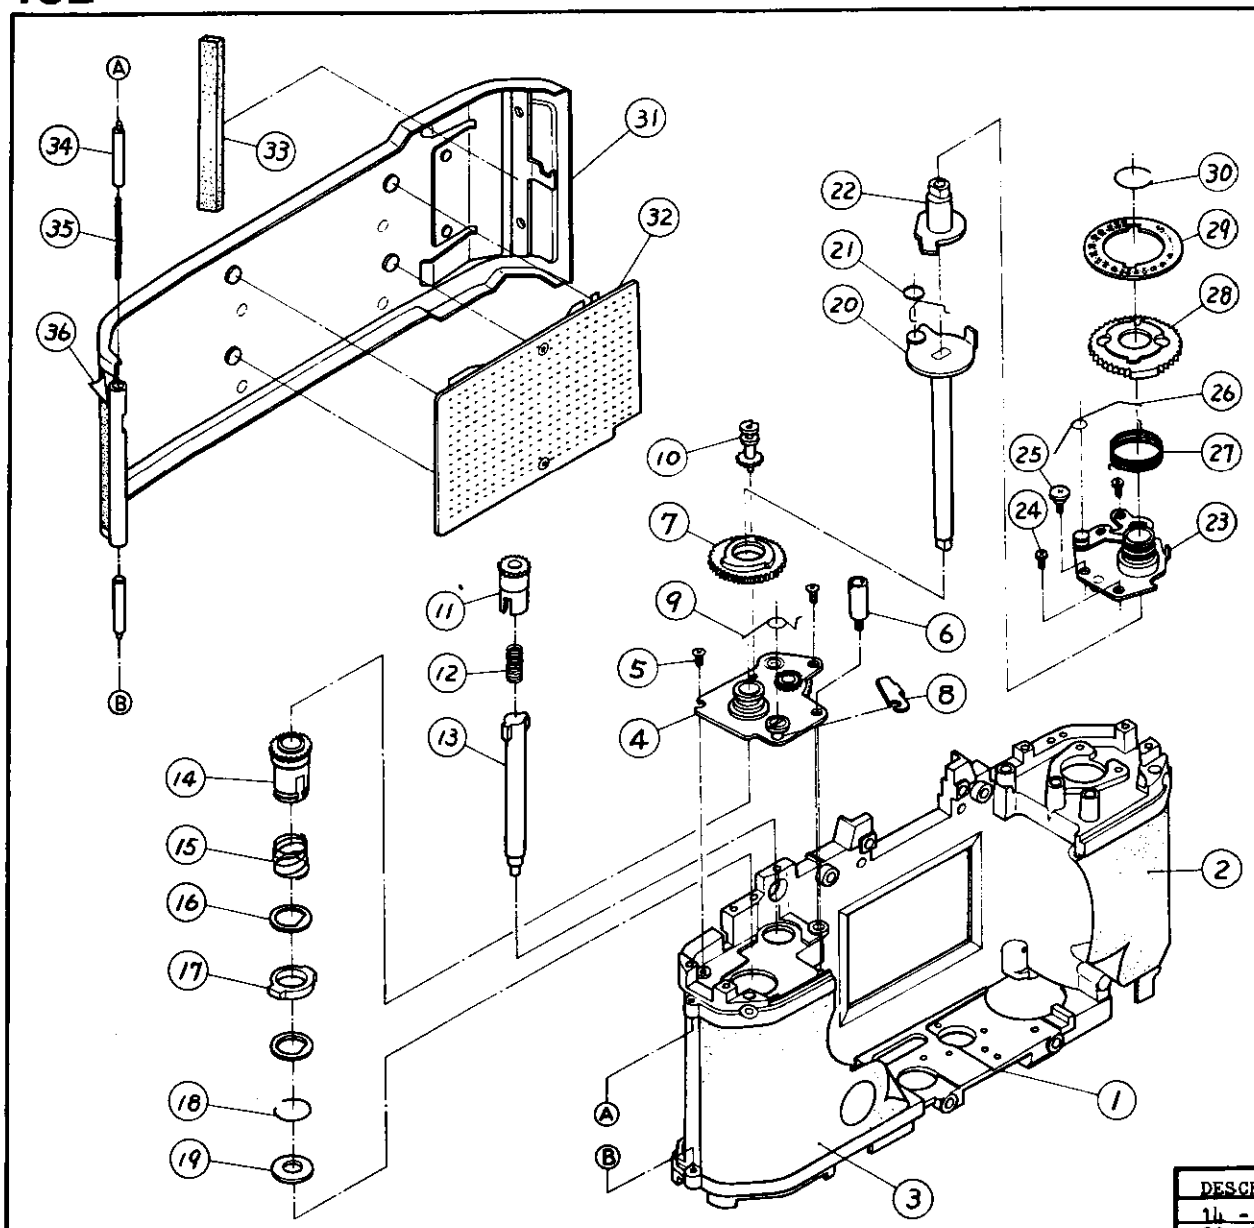

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Body	1
2	152114	Front Leather (Right)	1
3	152115	Front Leather (Left)	1
4	069200	W. Base Plate Ass'y	1
5	61813524	W. Base Plate Ass'y S.S.	2
6	152610	S. Base Plate Post	1
7	147603	A. Gear	1
8	147611	A. Gear Stopper	1
9	147619	A. Gear Stopper Spring	1
10	147863	Counter Gear - 1	1
11	139644	Sprocket Geer	1
12	139650	Sprocket Spring	1
13	139647	Sprocket Shaft	1
14	147616	Spool Gear	1
15	147640	Friction Washer	1
16	139640	Friction Washer	2
17	139639	Friction Plate	1
18	147642	Spring Cover Stopper	1
19	60284110	Washer	1
20	069641-A	Winding Shaft Ass'y	1
21	147625	Rachet Claw Spring	1
22	069645	Winding Lever Shaft Ass'y	1
23	★	Counter Base Plate Ass'y	1
24	61913024	Counter Base Plate Ass'y S.S.	2
25	147816	Lock Lever Shaft	1
26	152870	Counter Reverse Lever Spring	1
27	139890	Counter Spring	1
28	139888	Counter Gear - 2	1
29	152864	Counter Name Plate	1
30	139891	Counter Gear Stopper	1
31	★	Back Cover Ass'y	1
32	066287	Pressure Plate Ass'y	1
33	132108	Back Cover Lock Moquette	1
34	152106	Hinge Shaft	2
35	131133	Hinge Shaft Spring	1
36	152109	Back Cover Leather	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
14 - 19	066601	Spool Gear Ass'y
23, 26 - 30	069830	Counter Base Plate Ass'y
31, 33, 36	069103	Back Cover Ass'y

NOTE: (Parts with marked "★" are not available.)

No. 6

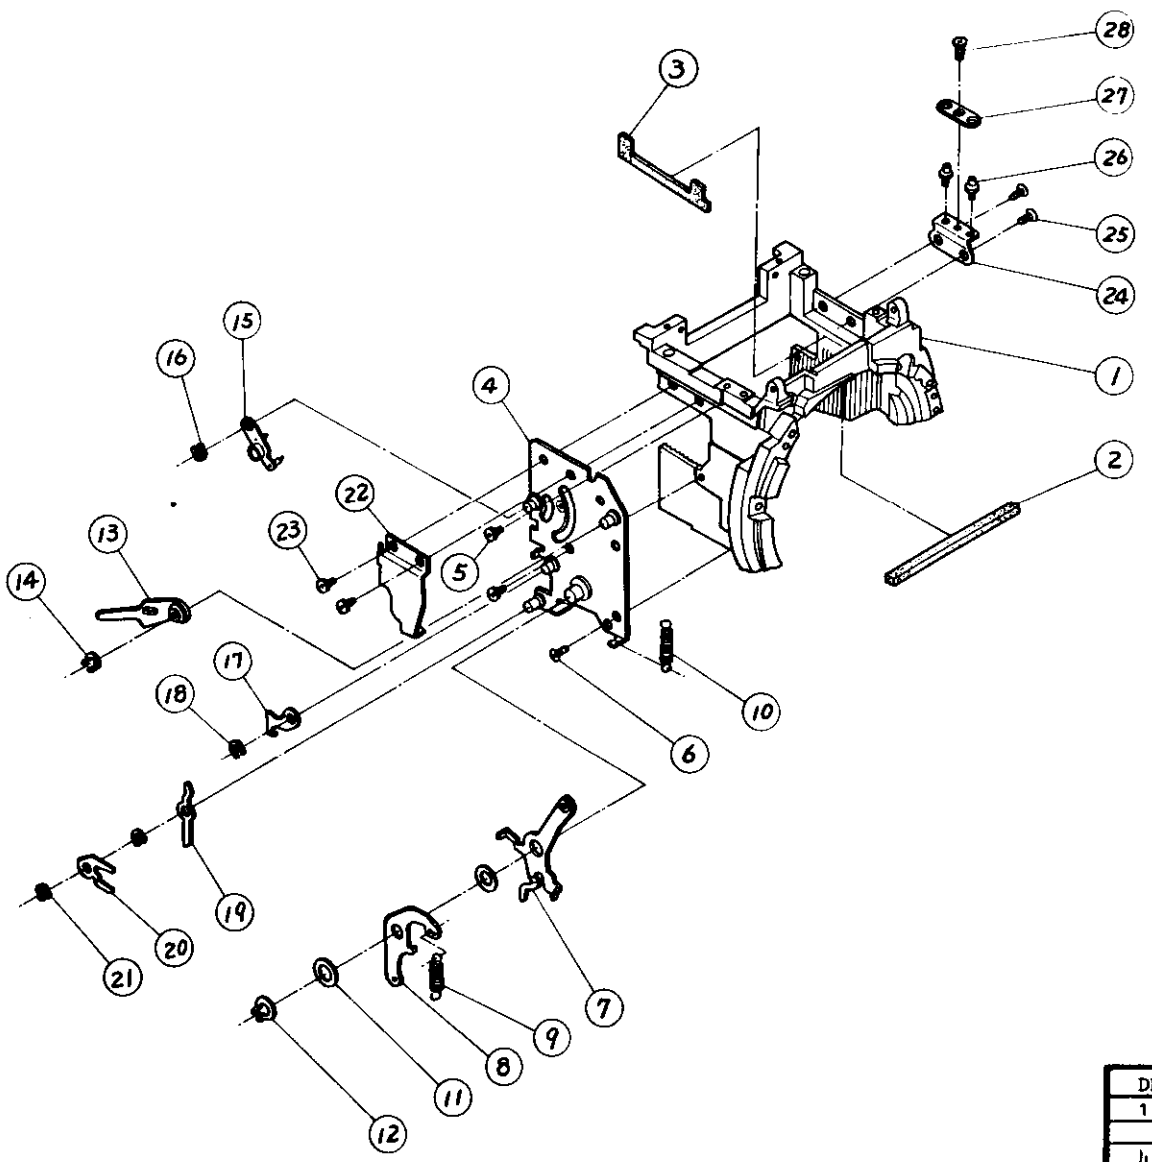

	PARTS NO.	DESCRIPTION	Q'TY
1	★	Mirror Box	1
2	139787	Mirror Cushion } (Select)	1
-	147787	" "	-
3	139859	M. Moquette	1
4	139753-A	MC. Base Plate Sub Ass'y	1
5	152782	MC. Base Plate S.S.	2
6	152781	" "	1
7	065212	MCL - 2 Ass'y	1
8	065297	MCL - 1 Ass'y	1
9	139760	MC. Driving Spring	1
10	139761	MC. Restore Spring	1
11	60223122	MCL - 1 Washer	2
12	66173025	Snap Ring (GS - 3)	1
13	065213	MCL - 3 Ass'y	1
14	66172025	Snap Ring (GS - 2)	1
15	065214	MCL - 4 Ass'y	1
16	66172025	Snap Ring (GS-2)	1
17	139770	MCL - 5	1
18	66172025	Snap Ring (GS-2)	1
19	139771	MCL - 6	1
20	139772	MCL - 7	1
21	66172025	Snap Ring (GS-2)	2
22	139773	MC. Light-Proof Plate	1
23	63901524	MC. Light-Proof Plate S.S.	2
24	139875	S-LED Adjusting Plate - 1	1
25	61812524	S-LED Adjusting Plate - 1.S.S.	2
26	139879	S-LED Adjusting Screw	2
27	139877	S-LED Adjusting Plate - 2	1
28	61914522	S-LED Adjusting Plate - 2.S.S.	1

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 21	069750	Mirror Box Ass'y
		(See! Page No. 4,7,8)
4, 7-14, 17-21	069195	MC. Base Plate Ass'y

NOTE: (Parts with marked "★" are not available.)

No. 7

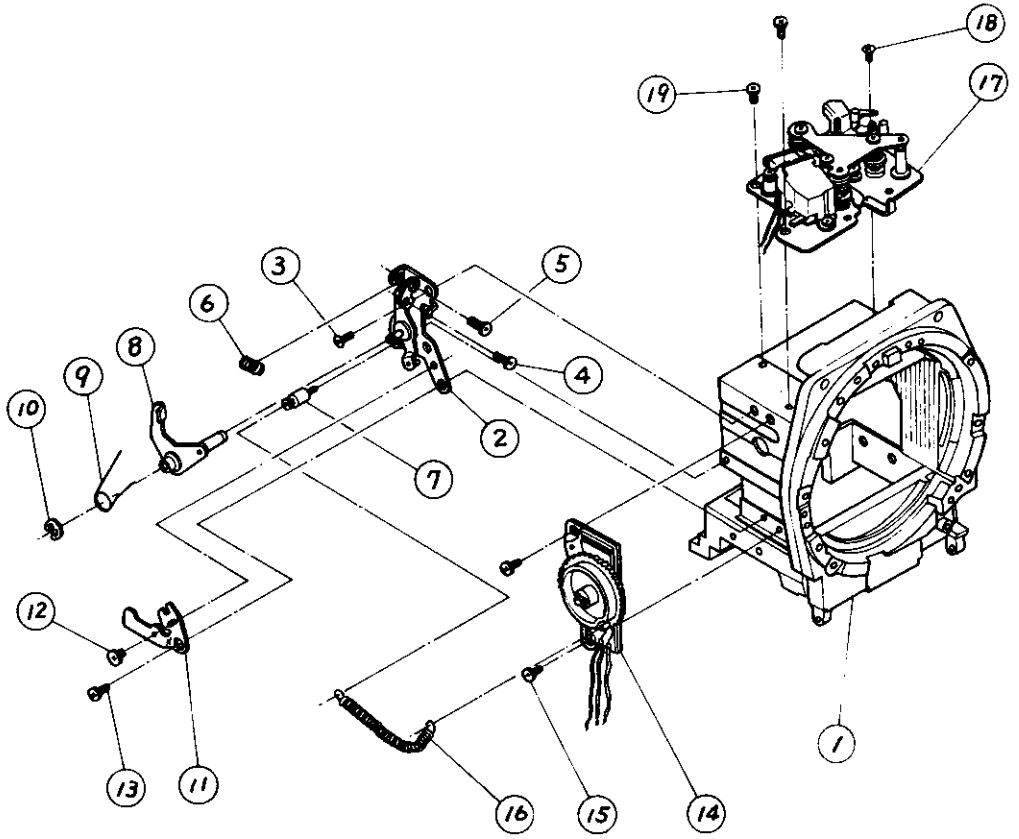

	PARTS NO	DESCRIPTION	Q'TY
1	★	Mirror Box	1
2	069250	ML. Base Plate Ass'y	1
3	152781	ML. Base Plate Ass'y S.S.	1
4	63913024	" "	1
5	63914022	" "	1
6	139833	ML. Base Plate Spring	1
7	147831	Aperture Resister Spring Post	1
8	065255	ML - 5 Ass'y	1
9	139808	ML - 4 , 5 Spring	1
10	66101525	E- Ring (E-15)	1
11	065256	ML - 6 Ass'y	1
12	63911524	ML - 6 Ass'y S.S.	1
13	139834	" "	1
14	069637	AVR Ass'y	1
15	152782	AVR Ass'y S.S.	2
16	147830	Aperture Resister Spring	1
17	069197	QR Base Plate Ass'y	1
18	152781	QR Base Plate Ass'y S.S.	1
19	152782	" "	2

DESCRIPTION	ORDER NO.	ASSEMBLY PARTS
1 - 19	069-750	Mirror Box Ass'y
		(See! Page No. 4,6,8)

NOTE : (Parts marked "★" are not Available)

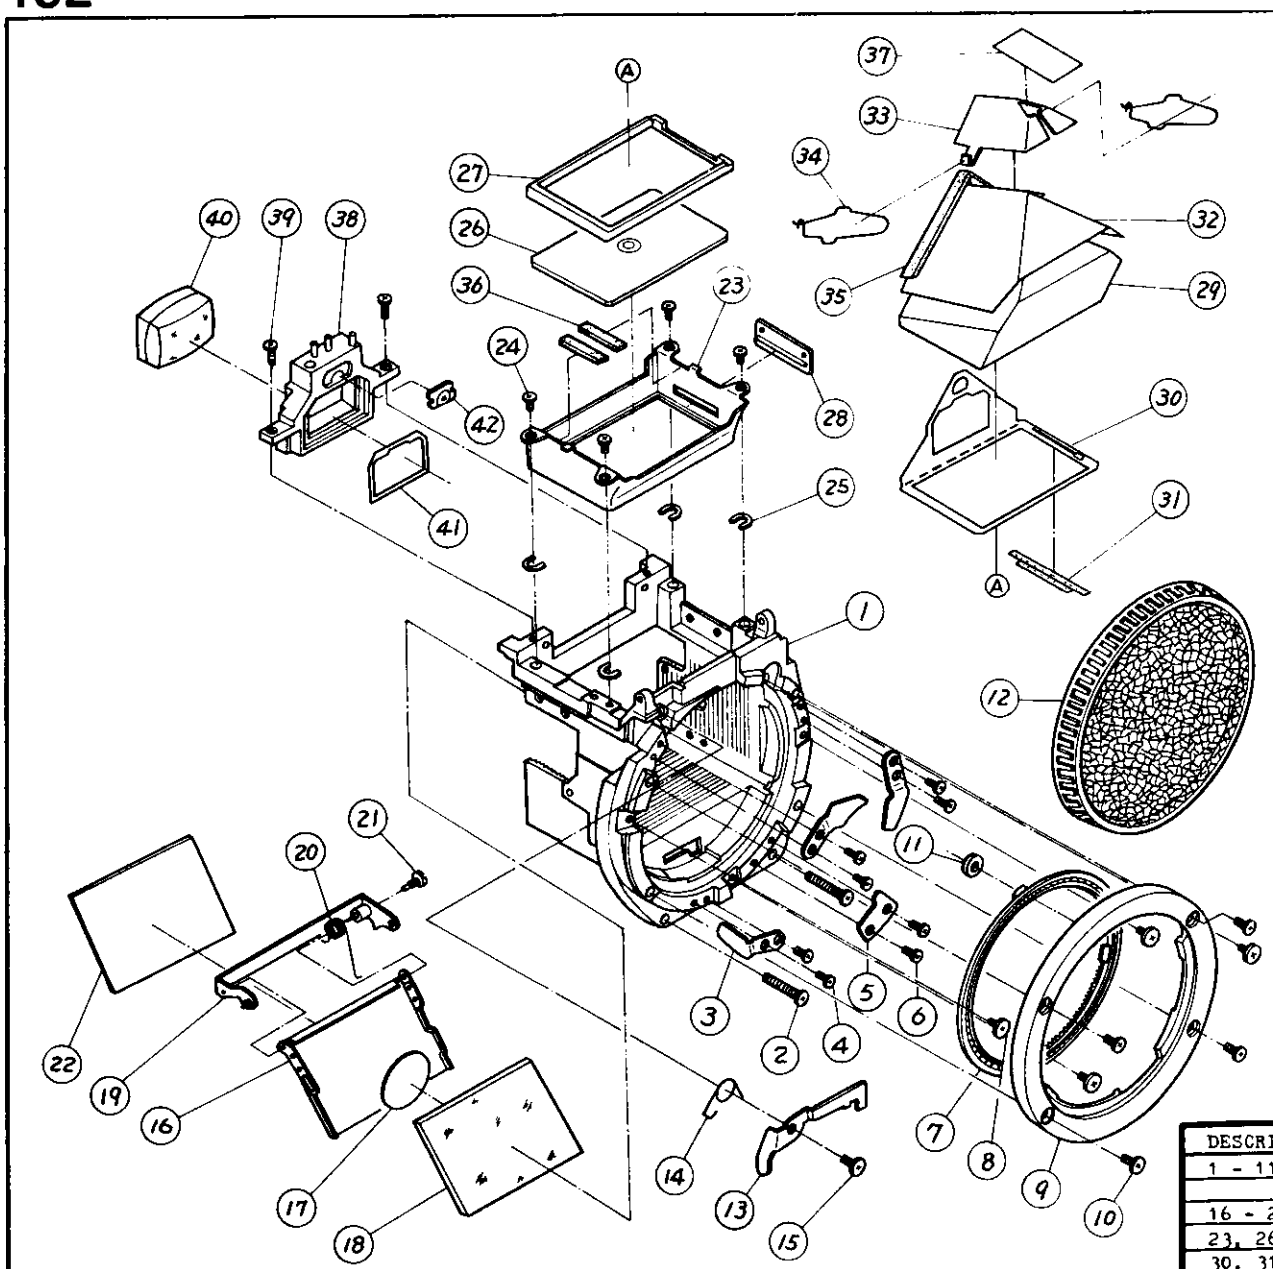

	PARTS NO.	DESCRIPTION	Q'T
1	★	Mirror Box	1
2	132143	Strap Holder S.S.	2
3	139812	Mount Spring	3
4	61913024	Mount Spring S.S.	6
5	139813	Mount Stopper	1
6	61913024	Mount Stopper S.S.	2
7	139823	F. Stop Connecting Ring	1
8	66001041	F. Stop Connecting Ring S.S.	4
9	147821	Body Mount	1
10	131177	Body Mount S.S.	4
11	147822	Lock Lever Washer	1
12	128118	Body Cap	1
13	139815	Lock Lever	1
14	147817	Lock Lever Spring	1
15	147816	Lock Lever Shaft	1
16	066741	M. Frame Sub Ass'y	1
17	139774	Mirror Adhesive Tape	1
18	147791	Mirror	1
19	065253	ML -3 Ass'y	1
20	139798	M. Spring	1
21	139796	M. Pin - 2	1
22	139799	M. Frame Light-Proof Sheet	1
23	139814	Penta Prism Holder	1
24	63913024	Penta Prism Holder S.S.	4
25	139871	P. Adjusting Washer(t 0.5)	Se-
-	139872	" " (t 0.2)	lect 4
-	139873	" " (t 0.3)	-
26	152866	Focusing Glass	1
27	139870	Penta Spacer	1
28	139865	S. Prism	1
29	152860	Penta Prism	1
30	139868	Finder Mask Frame	1
31	139869	S. Name Plate	1
32	139861	Penta Cover	1
33	139862	Penta Prism Fixer	1
34	139863	Penta Prism Fixer Spring	2
35	139858	Penta Dust-Proof Moquette	1
36	131710	Mirror Cushion	2
37	-	Acetate Cloth Tape	1
38	139873	SPD Holder - 3	1
39	63904024	SPD Holder S.S.	2
40	139878	Eye-Piece Lens	1
41	139882	Eye-Piece Mask	1
42	142-819	Light-Gathering Lens	1

DESCRIPTION	ORDER NO	ASSEMBLY PARTS
1 - 11, 13 - 22	069750	Mirror Box Ass'y (See! Page No. 4,6,7)
16 - 22	066741	M. Frame Ass'y
23, 26 - 37	069815	Penta Prism Holder Ass'y
30, 31	065856	Finder Mask Frame Ass'y
38, 40 - 42	065662	SPD Holder Ass'y

NOTE : (Parts marked "★" are not Available)